

### Load Defaults



any code to program the device for USB. The bar code code changes the terminal ID to 131.



### \*Transmit EAN-8 Check Digit



When this option is chosen, the scanner will transmit the EAN-8 check digit.

### \*Enable EAN-8



When this option is enabled, the scanner will scan EAN-8 bar codes.

### \*Enable UPC/EAN



When this option is enabled, the scanner will scan UPC/EAN bar codes.

### \*Enable UPC-E



When this option is enabled, the scanner will scan UPC-E bar codes.

**\*Transmit UPC-A Check Digit**



When this option is chosen, the scanner will transmit the UPC-A check digit.

**Transmit UPC-E Check Digit**



When this option is chosen, the scanner will transmit the UPC-E check digit.

**\*Enable UPC-A**



When this options enabled, the scanner will scan UPC-A bar codes.

 
This selection allows you to specify whether at the end of the scanned data or not



\* On



***EAN/JAN 13***



\* On



5 Digit Addenda On

**Expand UPC-E**



When this option is chosen, the scanner will expand UPC-E to the 12 digit equivalent UPC-A.