

Modified: Programming Barcodes for LS2208

Configuration name in Utility : Modified
Last Modified : 05-Oct-18
Windows Filename : Config File_LS2208_P360NEW.scncfg
Plug-in Name : LS2208-COMMON MODELS v2.0-007



Instructions: Scan barcodes in order, starting with programming barcode 1.

1/7. Set Factory Defaults



Cable Connection Settings

USB

2/7. USB Device Type IBM Handheld USB,Ignore Beep Directives Enable



3/7. Ignore Bar Code Configuration Enable



Symbology (bar code type) Settings

4/7. Enable UPC-E1,Decode UPC/EAN/JAN Supplementals Autodiscriminate,Enable Convert UPC-E to UPC-A,Enable Convert UPC-E1 to UPC-A



5/7. Enable EAN-8/JAN-8 Extend,ISBN-13 Bookland ISBN Format



Modify Data

6/7. Suffix 1 : Enter,7,0,1,3,Scan Data Transmission Format <Data><Suffix 1>



Modified: Programming Barcodes for LS2208

Configuration name in Utility : Modified
Last Modified : 05-Oct-18
Windows Filename : Config File_LS2208_P360NEW.scncfg
Plug-in Name : LS2208-COMMON MODELS v2.0-007



General Parameter Settings

7/7. Configuration File Modified



Firmware:

CAACFS00-002-R00

Supported Scanner Models for Plug-in :

- LS2208-SR20001BR
- LS2208-SR20001BR-K
- LS2208-SR20001BR-R
- LS2208-SR20001BR-U
- LS2208-SR20001BZ-K
- LS2208-SR20001NA
- LS2208-SR20001R
- LS2208-SR20001R-KR
- LS2208-SR20001R-NA
- LS2208-SR20001R-UR
- LS2208-SR20001Z-UR
- LS2208-SR20007BR-K
- LS2208-SR20007BR-R
- LS2208-SR20007BR-U
- LS2208-SR20007BZ-K
- LS2208-SR20007NA
- LS2208-SR20007R

Modified: Programming Barcodes for LS2208

Configuration name in Utility : Modified
Last Modified : 05-Oct-18
Windows Filename : Config File_LS2208_P360NEW.scncfg
Plug-in Name : LS2208-COMMON MODELS v2.0-007



LS2208-SR20007R-KR

LS2208-SR20007R-NA

LS2208-SR20007R-UR

LS2208-SR20007Y

LS2208-SR30001R

LS2208-SR30007R