
 



**Symbol LS3578
Using USB Connection from Cradle Host
On WinPOS and PRISM POS**

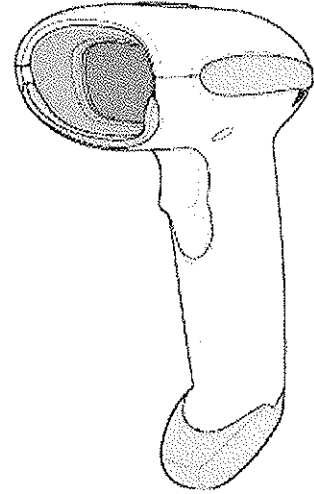

***Restore Defaults**



 
**Convert UPC-E to UPC-A
(Enable)**




Decode UPC/EAN/JAN Only With Supplementals



 
Autodiscriminate UPC/EAN/JAN Supplementals




IBM PC/AT & IBM PC Compatibles¹

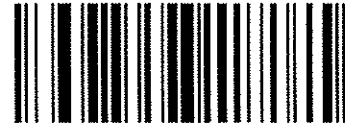

Scan Options

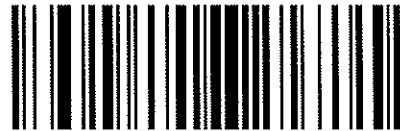

<DATA> <SUFFIX>

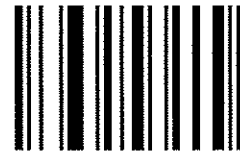

Enter



CRADLE HOST

**Scan “Pair” barcode on the Cradle Host
to sync the scanner with the host**