

LS4208_WinPOS_9: Programming Barcodes for LS4208

Configuration name in Utility : LS4208_WinPOS_9
Last Modified : 01-Sep-16
Windows Filename : Config File_LS4208_WinPOS_9_2016.09.01.scncfg
Plug-in Name : LS4208-COMMON MODELS-016



Instructions: Scan barcodes in order, starting with programming barcode 1.

1/7. Set Factory Defaults



Symbology (bar code type) Settings

2/7. Enable UPC-E1,Decode UPC/EAN/JAN Supplementals Autodiscriminate,Enable Convert UPC-E to UPC-A,Enable Convert UPC-E1 to UPC-A



Modify Data

3/7. Erase All Rules



4/7. Begin New Rule,1. Send All that remains,2. Send Extended Key <Enter>



5/7. Save Rule



General Parameter Settings

6/7. Low Power Power Mode,Beeper Volume Medium,Beeper Tone High



LS4208_WinPOS_9: Programming Barcodes for LS4208

Configuration name in Utility : LS4208_WinPOS_9
Last Modified : 01-Sep-16
Windows Filename : Config File_LS4208_WinPOS_9_2016.09.01.scncfg
Plug-in Name : LS4208-COMMON MODELS-016



77. Configuration File LS4208_WinPOS_9



Notes:

v9. for FW v NBRALAAL

Firmware:

NBRALAAL

Supported Scanner Models for Plug-in :

LS4208-2356-4208-0000

LS4208-SR20001ZC

LS4208-SR20001ZCR

LS4208-SR20001ZZ

LS4208-SR20001ZZR

LS4208-SR20007ZC

LS4208-SR20007ZCR

LS4208-SR20007ZZ

LS4208-SR20007ZZR